

~~H40~~

H18

INSTRUCTION BOOK DEPT.
LIBRARY
MASTER COPY





ZANUSSI

Instructions for the use and care of ZF 49/54 refrigerator/freezer

H18

~~H40~~

INSTRUCTIONS FOR INSTALLATION AND USE

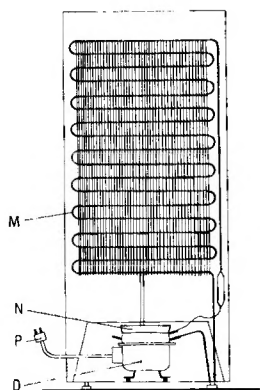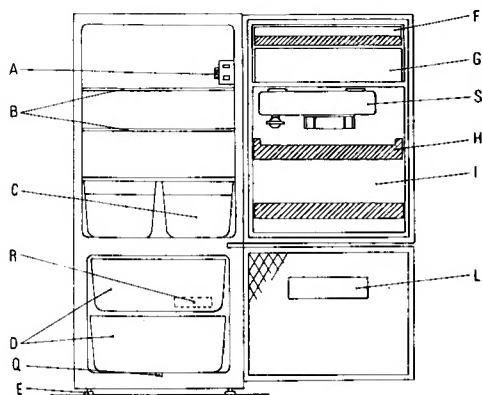

Refrigerator-freezer

- A** Thermostat of the refrigerator
- B** Grilled shelves
- C** Baskets for vegetables
- D** Baskets of the freezer
- E** Adjustable feet
- F** Eggs holder
- G** Dairy compartment
- H** Movable shelf
- I** Bottle compartment
- L** Freezing calender
- M** Condensator
- N** The defrosting-water tank
- O** Compressor
- P** Plug
- Q** Water discharge spout
- R** Basket ice-maker
- S** Drinks Dispenser

Electrical supply and connection

Warning

This appliance must be earthed

Important

 
The wires in this mains lead are coloured in accordance with the following code:

Green and Yellow: earth

Blue: neutral

Brown: live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

The Refrigerator/Freezer should be connected to a 220-240V 50 cycle, A.C. supply by the use of a three pin plug and socket, suitably earthed. If the appliance is connected to a 13 amp. (BS 1363) plug top, it should be fitted with a 13 amp fuse. If a 15 amp. plug and socket is used, the socket should be protected by a 15 amp fuse.

Please note

If you are discarding an old refrigerator/freezer that has a lock or latch on the door, please ensure that the lock/latch is made unusable to avoid accidents to young children.

Installation

The refrigerator/freezer is supplied complete and ready to use, but must be installed at a suitable site, which should have been chosen beforehand. The site must be a firm, level, dry surface and providing adequate air circulation to the sides, rear and base of the cabinet. Avoid placing the refrigerator/freezer next to radiators or any other domestic appliances which are normally hot. It is also advisable to leave a space of 3 to 5 centimetres between the cabinet and any adjacent furniture or walls.

The interior of the appliance should be cleaned before putting into use. Use lukewarm water with a mild solution of bicarbonate of soda (mix 1 teaspoon of bicarbonate of soda for each quart of water) DO NOT USE ABRASIVE AGENTS.

Note:

This appliance is manufactured to comply with British Standards specifications to operate between (+16 to +32)°C or (+59 to +90)°F.

If the appliance is installed in conditions where the ambient temperatures exceed this limit, the appliance may not operate to its full efficiency.

Controls

The internal temperature of both the refrigerator and the freezer are controlled by one thermostat (A) which is located in the refrigerator (upper) compartment.

The thermostat knob is graduated from 1 to 7. Number 1 is the warmest setting, Number 7 the coldest. To set to off position, turn the control knob counter clockwise from no. 1 so the black dot is opposite the marker on the control box.

Interior light

The interior light is operated by an automatic door switch. To change the light bulb, clip, off the plastic cover and replace bulb, which is a small screw cap 10 watts 220/240 volts. **IMPORTANT:** switch off or remove mains plug before attempting to replace bulb.

Defrosting the refrigerator

This is done automatically, the resultant water being piped away to be disposed of automatically by an evaporative condenser device at the rear of the appliance (N).

Defrosting the freezer

Over a long period of time, frost will accumulate inside the freezer. The amount will depend on the length of time the door is left open and the amount of moisture introduced. When the frost becomes too thick, it will start to impair the efficiency of the freezer unit and must be removed.

Defrosting is best carried out when the freezer is nearly empty and should be completed as quickly as possible to prevent undue temperature rise in the food.

1. The day before defrosting, set the thermostat knob to a colder position, allowing the food to reach the coldest temperature possible.
2. Remove the mains plug from the socket.
3. Remove the contents from the freezer, wrap in blankets and place in a cool, well ventilated area.
4. Leave the door open and place a bowl of warm water in the freezer. When the frost is loose, it may be removed by scraping with the plastic scraper provided. **NEVER USE A METAL SCRAPER OR OTHER IMPLEMENTS IN YOUR FREEZER.**
5. To remove the defrost water from the cabinet, your freezer is fitted with a water discharge spout moulded into the centre of the bottom liner. Place a suitable container under the spout to catch the discharge water.
6. After defrosting, clean and dry the interior of the cabinet, reconnect the freezer to the power supply, set the control to Number 7 and allow the freezer to operate for 30 minutes before replacing the food. After 24 hours, switch the control to a less cold position.

Freezing fresh produce

Your freezer will freeze fresh produce successfully, but for best results you are advised to follow these instructions carefully:

1. Use only top quality produce - freezing preserves their quality but cannot improve it.

2. Carefully clean and prepare each item and wrap in freezer bags or place in a suitable container.
3. Keep down the size of each packet to a minimum, remember that square packages will utilize more effectively the storage space in your freezer.
4. Freeze each package as quickly as possible.
5. The food to be frozen has to be placed in the top basket or in the top shelf of the freezer compartment and it should be kept as far as possible from already frozen food.
6. The maximum weight of fresh food that can be frozen in any 24 hours is 6 Kgs for the model with two baskets, and 7 Kgs. for the model with three baskets and one shelf.

Note - prepacked frozen foods should be stored in accordance with the manufacturers instructions.

Do not place carbonated drinks in the freezer as they could explode when frozen.

Do not consume frozen foods (water ices, lollipops, etc.) direct from the freezer as this can result in a low temperature skin-burn.

Freezing calendar

Attached to the inner lining of your freezer door is a freezing calendar (L).

The symbols indicate the different foods to be frozen.

The figures give the normal safe storage period in months.

Maintaining the unit

It is advisable to clean the condenser (black grille fitted to the rear of the freezer) with a brush from time to time to remove any accumulation of dust.

Before this operation, remove the mains plug from the socket.

Note

Do not leave the door of the freezer open for longer than necessary.

Frequent opening or changing of the food position in the cabinet can alter the internal temperature.

If the freezer should fail to work, check that the mains plug is correctly in the socket and switched on.

In the event of the freezer failing to operate due to a power failure do not worry unduly. Providing the door is kept closed, frozen food will keep within the freezer for at least 24 hours. Extra protection can be given by covering the freezer with two or three thick blankets.

If a longer breakdown is anticipated try to remove the food to another freezer or a cold store before defrosting begins.


Before this operation, remove the mains plug from the socket.

Door reversibility

Upright cabinets are normally supplied with the doors hinged to the cabinet on the right hand side (looking from the front). When necessary it is possible to change the doors to hinge on the left hand side.

The procedure is as follows: (See Fig. 2).



1. Unscrew and remove the bottom hinge (A) and lift off the bottom door.
2. Unscrew the support pin (B) from the bottom hinge, turn the hinge over and refit the support pin to the opposite side.
3. Unscrew the centre hinge (C) and lift off the top door.
4. Unscrew the right upper hinge (D) and refit it to the upper left hand.
5. Remount the top door on to the top support pin and refit the centre hinge to the left side.
6. Remount the bottom door on to the centre hinge support pin and refit the bottom hinge.
7. Remove the handles from left side and fit them to right side.

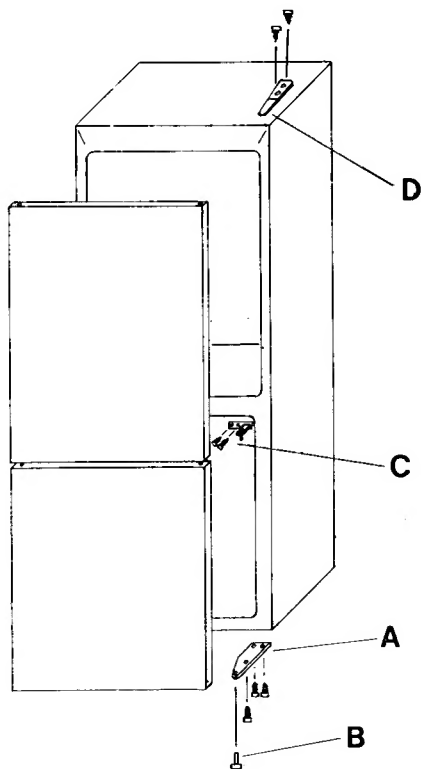

Door decor panels

Some models in the range of refrigerator/freezers can have fitted to the door decor panels to the users choice. To fit the panels use the following instructions:

- a) Loosen the screws securing the door frame to allow the insertion of the decor panels of your choice (3).
 - b) Take off the frame on the hinge side (2).
 - c) Insert the decor panel (3).
 - d) Re-fit the frame on the hinge side and tighten other screws (4). If the appliance has been supplied without a door frame but with plastic stoppers along the door sides this can be supplied as an optional extra, then use the followings instructions:
- a) Take out the plastic stoppers (5) inserted in the holes provided for the fixing of the frame.
 - b) Fit the frames (2) to the door with the screws supplied (1). Make sure to locate correctly plastic distance pieces (6) when assembling the upper and lower frames on the edges of the door. Fit the screws in accordance with the positions indicated on the plastic edges of the door (7).
 - c) Complete the fitting of the panel and reassembly of the frame as indicated in points b/c/d above.

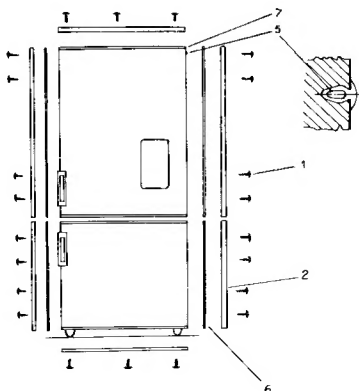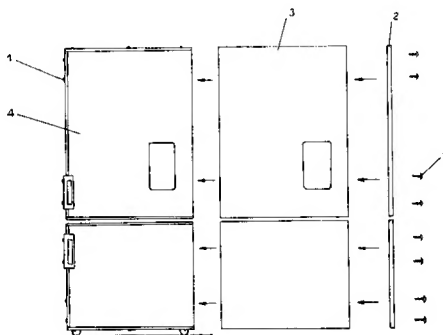

Drinks dispenser (S)

If your refrigerator/freezer is fitted with a drinks dispenser, to operate, open the perspex door, hold a glass under the dispenser spout and push gently.

The dispenser tank is located in the door moulding, to remove press down on the release catch and slide the tank from the door moulding.

To replace, locate the nozzle on the tank into the spout and slide into place.

Attention: This appliance conforms with the requirements of EEC directive number 76/889 relating to radio interference.



ZANUSSI STANDARD GUARANTEE CONDITIONS

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of the guarantee card.

We, IAZ International (UK) Ltd, undertake that if, within twelve months (24 months for TV sets) of the date of the purchase, this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.

- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

- The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Zanussi Network Service Centre (or the Zanussi Authorised TV Service Dealer).

Any appliance or defective part replaced shall become our property.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.

- Costs incurred for calls to put right machines improperly installed or calls to machines outside the UK and the Republic of Ireland.

- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.

- Television receivers - routine adjustment, or poor reception resulting from a source outside of the receiver.



ZANUSSI 5 YEAR COVER CONDITIONS

For a once-only payment you can extend your Standard Guarantee to 5 years. All the conditions and exclusions of the Standard Guarantee apply.

Notes

1. Products supplied as "seconds", refurbished, damaged or shop-soiled are not eligible for Zanussi 5 year cover.
2. The issue of a cover does NOT by virtue of our having done so, nullify the exclusions.
3. The Engineer will need to check the details of your Cover card and may make a charge for his services if it is not presented to him at the time of his call.
4. The date of purchase, or the date of initial payment (deposit) of the appliance will be deemed the date of commencement of cover.
5. Covers issued are not refundable or transferable.

ZANUSSI

The appliance of science